

## IDING STACKING

1. Assemble and mount track


2. Insert carriers, stops (and pivots for PV systems)

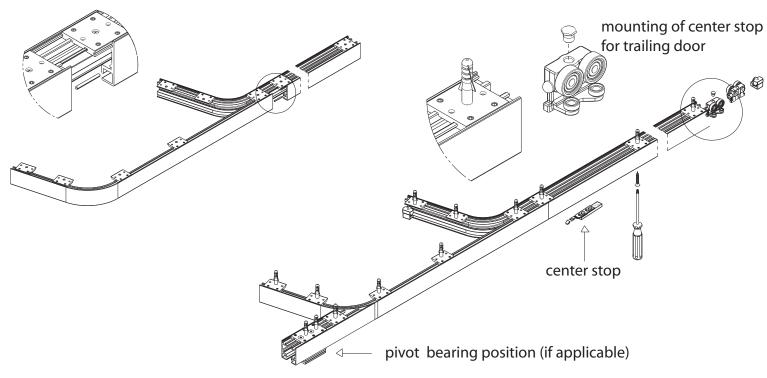


3. Attach hanger to carrier

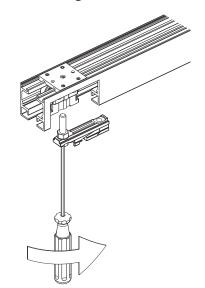


4. Insert hanger into door channel and adjust height

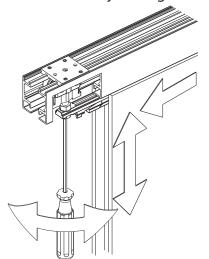


5. Tighten nut

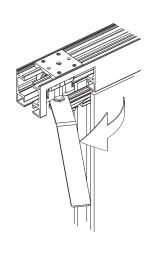

6. Tighten hanger set screw

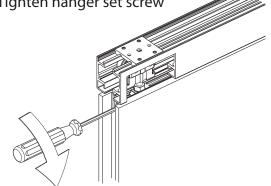

7. Place cap over door channel

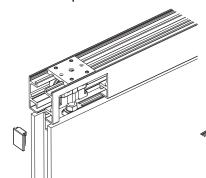

8. Mount end -piece

